

8. Converting from Continuous Mode to Jog Mode (Best Used with Zebra Shades)



Press STOP on the programmed remote for 5 seconds



Motor jogs once.



Press STOP on the programmed remote for 2 seconds



Motor jogs once and the shade is in jog mode.

While in Jog Mode, hold the UP or DOWN button for 3 seconds to move shade continuously.

Repeat the above process to change from Jog Mode to Continuous Operation Mode.

9. Adding an Additional Remote



Press STOP on the programmed remote for 5 seconds



Motor jogs once.



Press Up on new remote.



Motor jogs once, and the remote is added.

10. Cloning one Channel to Another



Select the channel you want to copy from and press STOP for 5 seconds.



Motor jogs once.



Select the channel you want to add to.



Press Up on the remote.



Motor jogs once and the channel is added.

11. Delete Single Channel Memory



Select the channel you want to delete and press STOP for 5 seconds.



Motor jogs once.



Press the program button on the remote for 1 second.



Motor jogs once, channel is deleted.

12. Delete All Memory/Reset Motor to Factory Settings



On the motor head, press program button 5 times and hold button for 3 seconds on the fifth time.



Motor jogs twice and the motor is reset.

HOME DECOR

WHOLESALE FABRICATORS

Made in America

VTi-1 & VTi-2

Motor Set Up Guide



Program Button



Handheld Remote

Wall-Mounted Remote

HOME DECOR WHOLESALE FABRICATORS
602-995-9659



REV 040521

1. Power ON/OFF Function

POWER ON



On the motor head, press and hold program button for 1 second. Motor beeps, power is on.

POWER OFF or SLEEP MODE



On the motor head, press and hold program button for 7 seconds.



Motor jogs at 1 second and the motor beeps to power off.

2. Programming



On the motor head, press program button for 1 second.



Motor jogs once.



Press Up.



Motor jogs once and is paired with the remote

3. Change Direction



Press STOP on the programmed remote for 5 seconds.



Press Down



Motor jogs once.



Motor jogs once and the direction is changed

4. Upper & Lower Limit Position Setting

When the first limit position has been set as the UPPER limit position, all other limit positions can only be set below this position. If the first limit position is the LOWER limit position, all other limit positions can only be set above this position.

If setting the UPPER limit position first, the UP button must be the last button pushed before pressing the back of the remote to finalize the limit setting. If the LOWER limit is set first, the DOWN button must be the LAST button pushed before pressing the back of the remote to finalize the limit setting.



Move shade close to desired UPPER or LOWER limit position



Press the program button on the remote for 1 second.



Motor jogs once to enter into limit setting preparation



Move Shade to desired UPPER or LOWER limit position



Press the program button on the back of the remote for 1 second.



Motor jogs once and the limit setting is finished. Repeat steps to set the opposite limit position.

5. Middle Limit Position Setting



Move the motor to the desired MIDDLE limit position.



Press the program button on the remote for 1 second.



Motor jogs once.



Press the program button for 1 second to save MIDDLE limit position.



Motor jogs once and the MIDDLE limit position is set. A maximum of four different middle positions may be set.

6. Resetting Limit Position



Move the motor to the UPPER, LOWER OR MIDDLE limit position to be changed.



Press the program button on the remote for 1 second.



Motor jogs once.



Move shade up or down to new limit position.



Press the program button for 1 second.



Motor jogs once and the new limit is set.

7. Deleting Limit Position



Move shade to limit position you want to delete.



Press and hold the program button for 7 seconds



Motor jogs once in 1 second.



Continue to hold program button



Motor jogs once after 7 seconds and the limit position is deleted.