

**7. Resetting LOWER Limit Position**



**8. Copying to Another Channel**




**9. Adding or Modifying "MY" Position**


ONLY ONE FAVORITE (MY) POSITION CAN BE SET:



Press and hold the MY button.

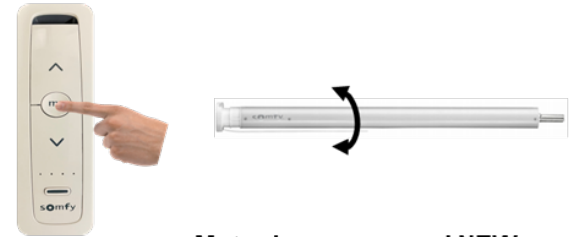

**10. Deleting All Memory and Reset Motor to Factory Settings**

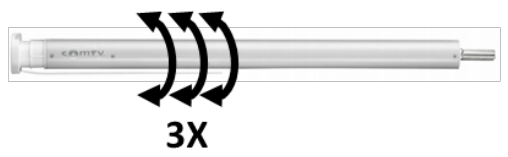


Motor will jog 3 times and all settings are erased.



Made in America

**Sonesse 30 – 24v  
Motor Set Up Guide**

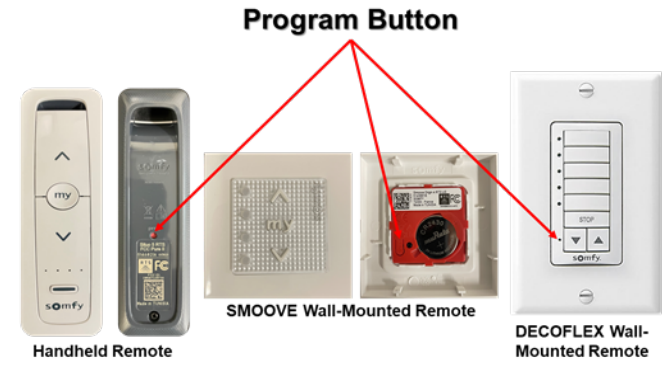

HOME DECOR WHOLESALE FABRICATORS  
602-995-9659



## 1. Waking Up Motor

### IF MOTOR IS PRE-PROGRAMMED



Apply power and the motor is ready for operation.

### IF MOTOR IS NOT PROGRAMMED



Apply power and the motor is ready for programming

## 2. Programming



Press UP and DOWN at the same time on the remote.



Motor jogs once and is in programming mode

## 3. Change Motor Rotation

CHECK MOTOR ROTATION. IF CHANGE NEEDED:



Press and hold MY button.



Motor jogs once, motor rotates in opposite direction

## 4. Upper & Lower Limit Position Setting



Press the UP or DOWN button to move the shade to the desired UPPER Limit position



Press the MY and DOWN button and release when shade begins to move. UPPER limit memorized.



Shade will Continue moving down.



Press the MY button when shade reaches desired LOWER limit position.



Press the MY and UP button and release when shade begins to move. LOWER limit memorized.



Shade will continue moving up to UPPER limit.

## 5. Finalizing the Programming

ONCE THE SHADE STOPS AT THE UPPER LIMIT:



Press and hold the MY button.



The shade jogs and the UPPER & LOWER limit positions are set.



Briefly Press Program button on back of remote.



The shade jogs and the UPPER and LOWER limit positions are recorded.

## 6. Resetting UPPER Limit Position



Move the motor to the UPPER limit position.



Press and hold the UP and DOWN buttons.



Motor jogs once.



Move the motor to the new UPPER limit.



Press and hold the MY button.



Motor jogs and NEW UPPER Limit set.