

1. Waking Up Motor

IF MOTOR IS PRE-PROGRAMMED



Attach the battery. The shade will jog and is ready for operation.

IF MOTOR IS NOT PROGRAMMED



Attach the battery. The shade will jog 3 times and is ready for programming.

2. Programming



Press UP and DOWN at the same time on the remote.



Motor jogs once and is in programming mode

3. Change Motor Rotation

CHECK MOTOR ROTATION. IF CHANGE NEEDED:



Press and hold MY button.



Motor jogs once, motor rotates in opposite direction

4. Upper & Lower Limit Position Setting



Press the UP or DOWN button to move the shade to the desired UPPER Limit position



Press the MY and DOWN button and release when shade begins to move. UPPER limit memorized.



Shade will Continue moving down.



Press the MY button when shade reaches desired LOWER limit position.



Press the MY and UP button and release when shade begins to move. LOWER limit memorized.



Shade will continue moving up to UPPER limit.

IF RESET TO FACTORY MODE
To Change back to Cellular Mode

- 1) Start by moving the shade away from the end limits and then **PRESS & HOLD** the UP and Down buttons until the shade jogs.
- 2) **PRESS & HOLD** the MY and DOWN buttons simultaneously UNTIL the shade jogs confirming the mode change.

5. Finalizing the Programming

ONCE THE SHADE STOPS AT THE UPPER LIMIT:



Press and hold the MY button.



The shade jogs and the UPPER & LOWER limit positions are set.



Briefly Press Program button on back of remote.



The shade jogs and the UPPER and LOWER limit positions are recorded.

6. Resetting UPPER Limit Position



Move the motor to the UPPER limit position.



Press and hold the UP and DOWN buttons.



Motor jogs once.



Move the motor to the new UPPER limit.



Press and hold the MY button.



Motor jogs and NEW UPPER Limit set.

7. Resetting LOWER Limit Position



8. Copying to Another Channel



Motor jogs and channel is copied.



9. Adding or Modifying "MY" Position

ONLY ONE FAVORITE (MY) POSITION CAN BE SET:



Use the UP or DOWN button to move the NEW favorite position.

Press the MY button to stop the motor.



Motor jogs once, and NEW Favorite (MY) position set.

10. Deleting All Memory and Reset Motor to Factory Settings



On the motor head, press and hold the motor programming button.




Motor will jog 3 times and all settings are erased.

HOME DECOR
WHOLESALE FABRICATORS

Made in America

Somfy Motorized Cellular Shade (Bottom-Up Only) Set Up Guide

Program Button

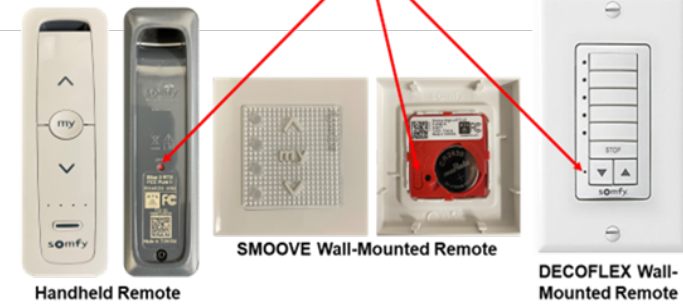

HOME DECOR WHOLESALE FABRICATORS
602-995-9659



REV: 071923